

www.glmmarine.com

Rebuilding the Mercuiser Engine Mounted Seawater Pump with the

GLM #12088 Rebuild Kit

- Install the Quad Ring (No. 84026) between the oil seal and the bearing housing.
- Install the stainless steel Wear Plate (No. 12501) on the bearing housing with the sharp edge towards the housing.
- Install the Gasket (No. 32731) on the Wear Plate (No. 12501).
- Install the water pump Impeller (No. 89740) on the shaft.
- Lightly coat the inside of the Impeller Housing (No. 12392) with marine grease.
- Push the Impeller Housing (No. 12392) over the Impeller with a clockwise twisting motion.
- Install the five Screws (No. 22452) through the Impeller Housing (No. 12392), Gasket (No. 32731) and Wear Plate (No. 12501). Thread the Screws into the bearing housing. Torque to 8-12 foot pounds in a cross pattern.

GLM No.12088 Rebuild Kit Includes:

5 Long Screws (No. 22452) 2 Short Screws (No. 22451) 5 Washers (No. 21720) Impeller Housing (No. 12392) Impeller (No. 89740) Gasket (No. 32731) Wear Plate (No. 12501) Quad Ring (No. 84026)

