


Instructions for Shift Cable Tool GLM No. 90520

OMC Cobra

1. Install shift cable and tighten securely into bell housing (Fig. A)
2. Attach cable end and guide tube to engine side of cable. (Fig. B)
3. Install engine side of shift cable into shift cable adjustment tool. (Fig. C)
4. Slide Bellcrank Alignment Plate onto lower studs of bell housing, use one of the locknuts to hold plate in place. (Fig. D)
5. Thread cable guide retainer onto shift cable until all slack is gone (Fig. E). Install & tighten retainer screw into shift cable guide. (Fig. F)
6. Remove bellcrank plate and shift cable tool. Install drive unit and complete shift cable adjustment using OMC service manual.

Shift Cable Tool GLM No. 90520

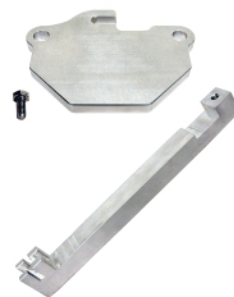

Kit contains:

GLM	OEM	Item
90500	914017	Bellcrank Alignment Plate
90510	915271	Shift Cable Tool

